



Selecting a Room Mode

1. After turning on the TouchPanel, select either “Dual Projector Mode” or “Lecture Capture Mode”

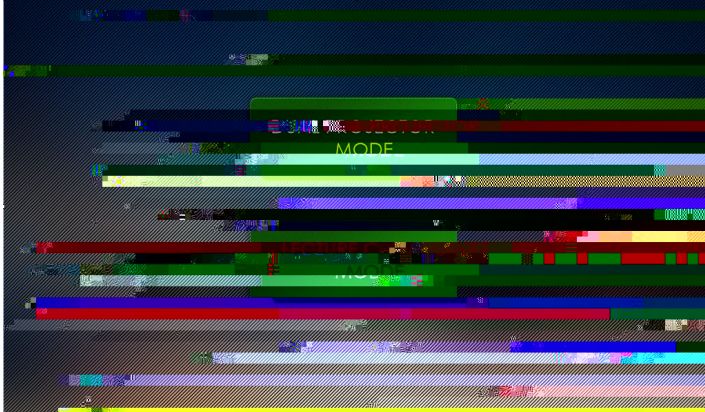

- x Dual Projector Mode: This enables you to use both classroom projectors to display two different source inputs at a time. Lecture Capture and Camera settings are unavailable in this mode.
- x Lecture Capture Mode: This enables you to use the classroom in a HyFlex setting. Lecture Capture and Camera Controls become available, as well as the Capture Preview function. Only one projector is used in this room mode.

2. Once a room mode has been selected, you can change room modes TouchPanel home page by selecting either “Dual Projector Mode”

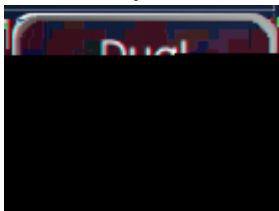

or “Lecture Capture Mode”



h • œ ' μ] (} œ K
, Ç & o Æ o • • œ } } u •

Academic Technology Services
Academic Services Bldg., Room 120
562-985-4959 | csulb.edu/at

Recording Zoom

Recording Lectures to USB Drive

1. Insert USB drive into port labeled “USB Storage” on the control panel.
A minimum of 1GB of space is required on your USB drive.
2. Press “Record” to begin recording (takes a few seconds to begin)
3. Press | | to pause the recording without ending it. Press it again to resume.
4. Press “MARK” t3 (B oPc 0.-6muu0 (4n)6.1 (e)- to/44 0 Td ()Tj1 Tw 0.87 536.04 Tm

Lecture Capture Settings
