
Recording Zoom Meetings in Hyflex Classrooms


1.

Lecture Capture Settings



Select the “Lecture Capture” button on the TouchPanel

Note: Blu-ray is disabled when using Lecture Capture mode, due to copyright restrictions.

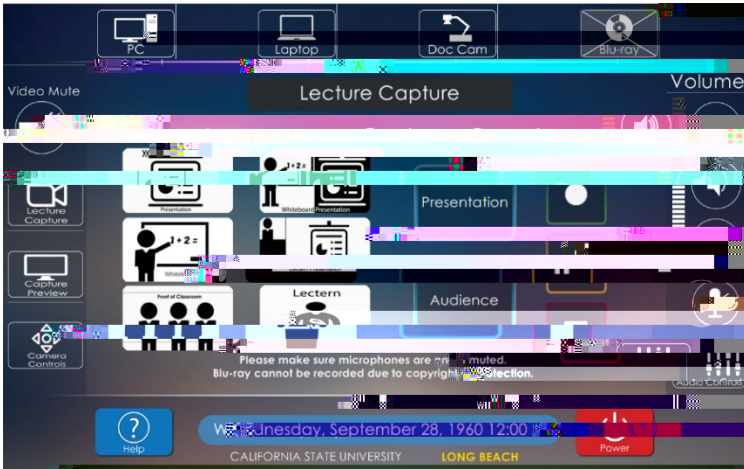

Layouts Select your preferred layout:

- Presentation (Input Source) Only
- Audience Camera Only
- Sideby-side View
- Whiteboard View
- Picture-in-picture View (Top Left or Top Right)
- Front of Classroom View
- Lectern (Instructor Camera) Only


Feed. Select either Presentation (PC/Laptop/Doc Cam) or Audience Camera. *Note: Presentation and Audience Cameras cannot be displayed at the same time. Layout presets will reflect this.*

Recording the buttons on this control panel.

Adjusting Camera Settings



Select the “Camera Control” button on the TouchPanel

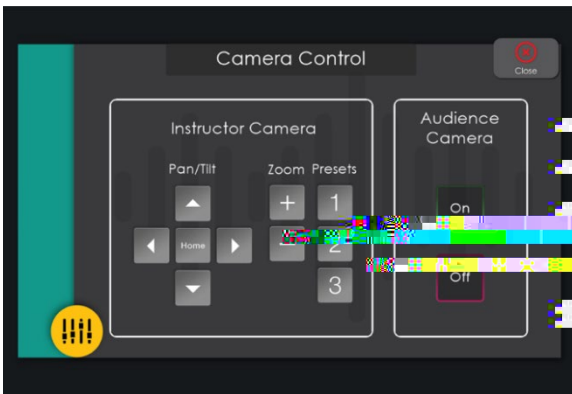

Instructor Camera:

Select one of three camera presets:

- #1: Zoom in on podium
- #2: Zoom in on whiteboard
- #3: Wide angle of front of classroom

Adjust camera angle with Pan/Tilt and Zoom

The Audience Camera faces the back of the classroom and will record any students in the room. This camera's angle cannot be adjusted. Select to turn it on or off.

Cao4-B q /G(e)-1 ()Tj -0.003 Tc 0.0(g)-